

## CORRECTING TIME & DATE FOR SIEMENS LOGO 8

- 1.) Press the “v arrow” button until the LCD information no longer changes information (displays current time & date). If correct- press “ ^ arrow” until display doesn’t change.  
If **incorrect** proceed as follows ,
- 2.) Press the “ESC” button.
- 3.) Press the “^ or v arrow” button until “SET UP” is highlighted then press the “OK” button.
- 4.) Press the “^ or v arrow” button until “Clock” is highlighted then press the “OK” button
- 5.) “Set Clock” is already highlighted so press the “OK” button.
- 6.) Use the “> or < arrow” buttons to move to the value needing editing, then use the “^ or v arrow” buttons to alter the value. After completion of editing the time & date press the “OK” button. **Note : time format is 24hr & date is year / month / day.**
- 7.) Press the “ESC” button until display returns to running current time and date screen.
- 8.) Press the “^” button until the LCD information doesn’t change – this is the running screen.