

Desigo[™] Room Automation

Compact actuating room automation stations, BACnet MS/TP, AC 24 V (Actuating DXR)

DXR1.M09PDZ-112, DXR1.M09PDZ-113



Combination of room automation station and actuator for buildings with increasing demand on functionality and flexibility in Room Automation, VAV and FPB applications.

- Compact, configurable room automation station in combination with actuator for HVAC
- QMX1.M34H and QMA1.N30H room unit
- BACnet MS/TP communications (BTL certified)
- USB interface
- Operating voltage AC 24 V
- Built-in 5 Nm actuator
- Internal 0...500 Pa differential pressure sensor
- Plug-in terminal blocks



Configurable

The DXR1.. automation stations provide the infrastructure for systems and applicationspecific functions which can be configured.

Compact series

The compact build allows direct mounting on the damper shaft. It is designed for VAV and FPB.

Plug-in terminal blocks

Plug-in terminal blocks for easy exchange of room automation stations.

Integrated actuator

The actuator gear base is integrated into the housing of the actuating DXR. It supports dampers with up to 5 Nm torque.

Use

Desigo Room Automation offers the highest level of flexibility for energy-optimized solutions while satisfying requirements for temperature control, ventilation and comfort using standard tools and established workflows.

Pre-installed application types

- Variable (VAV), Fan Powered Box (FPB) and constant air volume flow
 - with staged and modulating electric heating
 - with modulating hot water/chilled water with room or supply temperature control

Application options

- Separate temperature and air volume flow setpoints for all 4 operating modes
- Separate minimum and maximum cooling and heating flow setpoints
- Single-stage, multiple-stage or variable fan control (FPB/DXR1.M09PDZ-113)
- Chilled water and hot water valve
- Extract air volume flow control

Functions

The selected application and its parameters as well as input and output configuration determine the automation station's functionality.

A detailed description of functionality is available in the ABT (Automation Building Tool) online help.


Communication

- BACnet MS/TP
- USB connection for service, commissioning and firmware download

LED indication


LED	Color	Activity	Function
Run Gree n	Steady ON	Device is ready for operation	
	Steady OFF	Device is not powered	
		Regular flashing	Start-up or the program is stopped
	Red	Steady OFF	ОК
		Steady ON	Program error

2

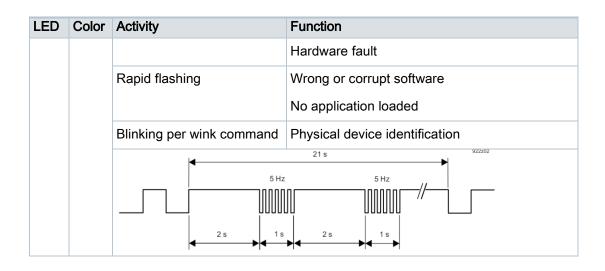

Service button (SVC)

Physical identification on the network.

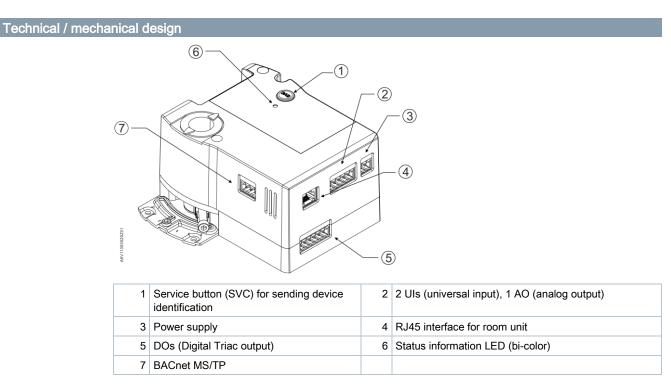

Housing

The housing consists essentially of flame retardant, non-brominated plastic.

Type summary

Product No.	Stock No.	Inputs	Outputs	Description	Quantity
DXR1.M09PDZ- 112	S55499-D462	2 universal inputs	4 digital outputs, 1 analog output	VAV application	Single package / multiple package (10)
DXR1.M09PDZ- 113	S55499-D463	2 universal inputs	4 digital outputs, 1 analog output	FPB application	Single package / multiple package (10)

Ordering

When ordering, indicate product number, stock number and description.

Equipment combinations

Product No.	Stock No.	Designation	Datasheet*
QMA1.N30H	S55499-D464	Room temperature sensor for DXR1 (without LCD)	A6V11393922
QMX1.M34H	S55499-D465	Room unit for DXR1 (with LCD)	A6V11393927

* The documents can be downloaded from http://siemens.com/bt/download by specifying the Datasheet number as shown in the above table.

Product documentation

Topic	Title	Document ID:
Installation, cable length, topology	Desigo Room Automation installation guide	CM111043
Engineering and commissioning	ABT online help	N/A
Installation instruction	Mounting instructions	A6V11393918
Commissioning	Quick guide	A6V11526405
Product environmental declaration	A6V11805930	
EU declarations (CE)		A6V11791489

Documents such as environmental declarations, CE declarations, etc., can be downloaded at the following Internet address:

http://siemens.com/bt/download

Notes

Security

	National safety regulations
 Failure to comply with national safety regulations may result in personal injury ar damage. Observe national provisions and comply with the appropriate safety regulatio Use only properly trained technicians for mounting, commissioning and servi 	

Engineering


Identification

Each device has a unique serial number to ensure efficient commissioning. It is provided on the adhesive barcode reader. The serial number can be read directly into the engineering tool using a barcode reader.

Wiring

Wiring must be sufficiently insulated to the available rated voltage. Sizing and fusing of the wiring depend on the connected load.

The automation station is mounted directly on a damper shaft.

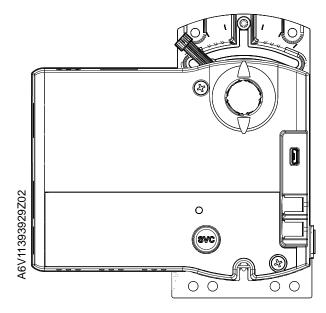

See the mounting instructions (document ID: A6V11393918) for detailed information.

Differential pressure sensor

- Avoid bends and pressure when attaching the tube.
- Connect the "+" connection on the side with the higher pressure and the "-" connection on the side with the lower pressure.
- Connection tubes (interior diameter) of 4 mm.
 Accessory kit DXA.T50 for connection tubes (interior diameter) of 6.5 mm.
- The maximum tube length is 2 m.

Installation

Applies to devices with supply output (AC 24 V or mains voltage) such as Triac output or output to supply a field device.

$\hat{\mathbf{A}}$	A WARNING	
$\langle 1 \rangle$	No internal line protection for supply lines to external consumers	
	Risk of fire and injury due to short-circuits	
	• Adapt the line diameters as per local regulations to the rated value of the installed fuse.	

Maintenance

The automation station is maintenance-free.

Disposal



The device is considered an electronic device for disposal in accordance with the European Guidelines and may not be disposed of as domestic garbage.

- Dispose of the device through channels provided for this purpose.
- Comply with all local and currently applicable laws and regulations.

Warranty

Technical data on specific applications are valid only together with Siemens products listed under "Equipment combinations". Siemens rejects any and all warranties in the event that third-party products are used.

Power data

Power supply		
Operating voltage (SELV/PELV)	AC 24 V +/-20%	
Frequency	50 or 60 Hz	
Power consumption	5 VA max.	

Transformer requirements and recommended voltages		
Туре	Class 2, AC 24 V, 50 / 60 Hz, SELV, PELV	
	·	

Functional data

Functional data		
Nominal torque	5 Nm	
Nominal rotary angle	90°	
Maximum rotary angle	95° ± 2°	
Runtime for 90° rotary angle	150 s	
Shaft size	816 mm, round810 mm, round (with centering insert)612.8 mm square	
Minimum shaft length	20 mm	

Universal inputs

Analog inputs: DC 010 V		
Operating range	010 V	
Resolution	10 mV	

Analog inputs: sensors				
Туре	Measuring range	Accuracy	Resolution	
LG / DIN-Ni 1000	050 °C	+/- 0.5 K at 25 °C	0.1 K at 25 °C	
Pt1K, 375 / 385				
NTC10K / NTC100K				

Digital inputs		
0/1 digital signal (binary)	For potential-free contacts	
Sampling voltage/current	DC 15 V, 7 mA	
Contact resistance	Max. 200 Ω (closed) Min. 50 kΩ (open)	
Delay	10 ms	
Pulse frequency	Max. 20 Hz	

Outputs

Analog output	
Control range	010 V
Resolution	5 mV
Output current	Max. 1 mA

Triac outputs	
Number of channels	4
Туре	Requires AC 24 V source to allow switching; switching to phase (AC 24 V) or neutral (\perp)
Current rating	0.5 A max. per channel
Voltage rating	AC 24 V +/-20%
Max. load	12 VA per channel

Pressure sensor

Pressure sensor		
Measurement range	0500 Pa	
Sample rate	≤ 500 ms	
Overload range	0100 kPa	
Measuring range accuracy	3%	
Zero point accuracy	0.2 Pa	
Resolution	12 Bit	

Connections

Interfaces	
MS/TP	Terminal: 5.08mm, 3 pin
	Cable: RS485 shielded STP twisted pair, 18 AWG
	Maximum network length :1000 m
	Point to point length: 500 m
	Termination resistor: 120 Ω
	Bitrates: max. 115.2 kbps
USB (2.0)	Type Micro B
Interface for room unit (QMA1.N30H and	RJ45 (shield CAT 5-E)
QMX1.M34H)	Max. wiring length: 30 m

Default network settings	
Mac address	Auto
Baud rate	76800
Network number	1

Wiring connections	
Wiring lengths for signals	MS/TP: 1000 m
	Signal lines: 80 m
	For analog inputs: 30 m

Conformity

Ambient conditions and protection classification	
Classification per IEC/EN 60730	
Function of automatic control devices	Туре 1
Pollution degree	2
Overvoltage category	III
Design type	Device suited for use with equipment of safety

Ambient conditions and protection classification	
	classes I and II
Degree of protection of housing to IEC EN 60529	
Room automation station	IP20
Climatic ambient conditions	
Transport (packaged for transport) as per	Class 2K3
IEC EN 60721-3-2	Temperature -2570 °C
	Air humidity 595% (non-condensing)
Operation as per IEC/EN 60721-3-3	Class 3K5
	Temperature -550 °C
	Air humidity 595% (non-condensing)
Mechanical ambient conditions	
Transport as per IEC/EN 60721-3-2	Class 2M2
Operation as per IEC/EN 60721-3-3	Class 3M2

Standards, directives and approvals		
Product standard	IEC/EN 60730-1 Automatic electronic controls for household and similar	
	use	
EU conformity (CE)	A6V11791489	
RCM conformity	A6V11791498	
EAC conformity	Eurasian conformity	
UL Approbation	UL as per UL916, http://ul.com/database	
Federal Communications Commission	cUL as per CSA – C22.2 No. 205	
	FCC CFR 47 Part 15 Class B	
ICES003	CAN ICES-3 (B)/NMB-3(B)	
Environmental compatibility	The product environmental declaration (A6V11805930*) contains data on environmentally compatible product design and assessments (RoHS compliance, materials composition, packaging, environmental benefit, disposal).	

* The documents can be downloaded from http://siemens.com/bt/download.

FCC regulations

Modification of this device to receive cellular radio telephone service signals is prohibited under FCC rules and federal law.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.


General

General information	
Color	Light gray
Dimensions	L × W × H = 137 × 143 × 82 mm
Weight	Net weight: 620.2 g Gross weight: 845.1 g

Diagrams

Connection terminals


DXR1.M09PDZ-112 and DXR1.M09PDZ-113

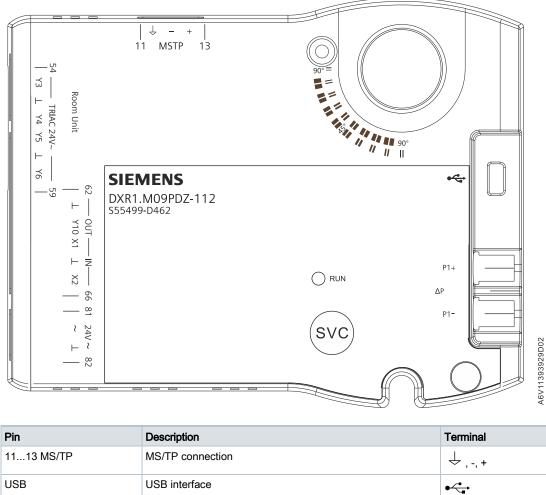



1110 100/11		⇒,-,+
USB	USB interface	●
8182 power	Power supply AC 24 V	V~
24 V~	System neutral (must always be grounded at the transformer)	\perp
6466 inputs	Universal inputs	X1, X2
62, 63 outputs	DC 010 V output	Y10
5456 Triac outputs	Digital output, switching to phase (AC 24 V) or neutral (\perp)	Y3, Y4


Pin	Description	Terminal
5759 Triac outputs	Digital output, switching to phase (AC 24 V) or neutral (\perp)	Y5, Y6
Room unit connection	RJ45 interface	
ΔP differential pressure	Connected to the higher pressure	P1+
detector	Connected to the lower pressure	P1-
Service	Service button	SVC
Display	Operation LED	RUN

Dimensions

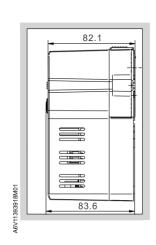

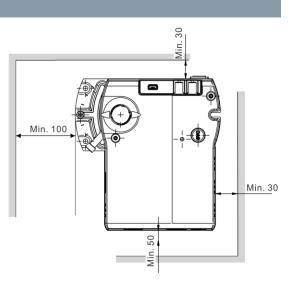

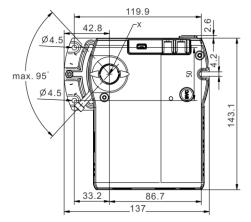

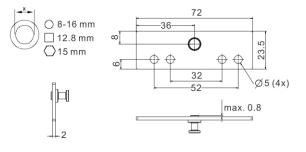

Dimensions in mm

Issued by Siemens Switzerland Ltd Smart Infrastructure Global Headquarters Theilerstrasse 1a CH-6300 Zug Tel. +41 58 724 2424 www.siemens.com/buildingtechnologies

Document IDA6V11393929_en--_cEdition2020-09-01